



## CONTOUR INGROUND BENCH 4 FT

TOOLS REQUIRED: 7/16" SOCKET


### MATERIALS



(2) BASE COMPONENTS



(2) BULLNOSE SLATS

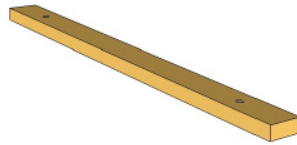

(6) SEAT SLATS



(16) CARRIAGE BOLTS



(16) NUTS

### INSTRUCTIONS



1. Verify all parts and hardware before beginning. Assemble on a flat level surface.

2. Fasten the slats to the bases using the supplied bolts and nuts. The bullnose slats are for the top and bottom. Do not overtighten as this might effect the integrity of the product.

3. Now prepare concrete to set bench.