




6ft Elite Flat Park Bench

SKU: 488be125-2

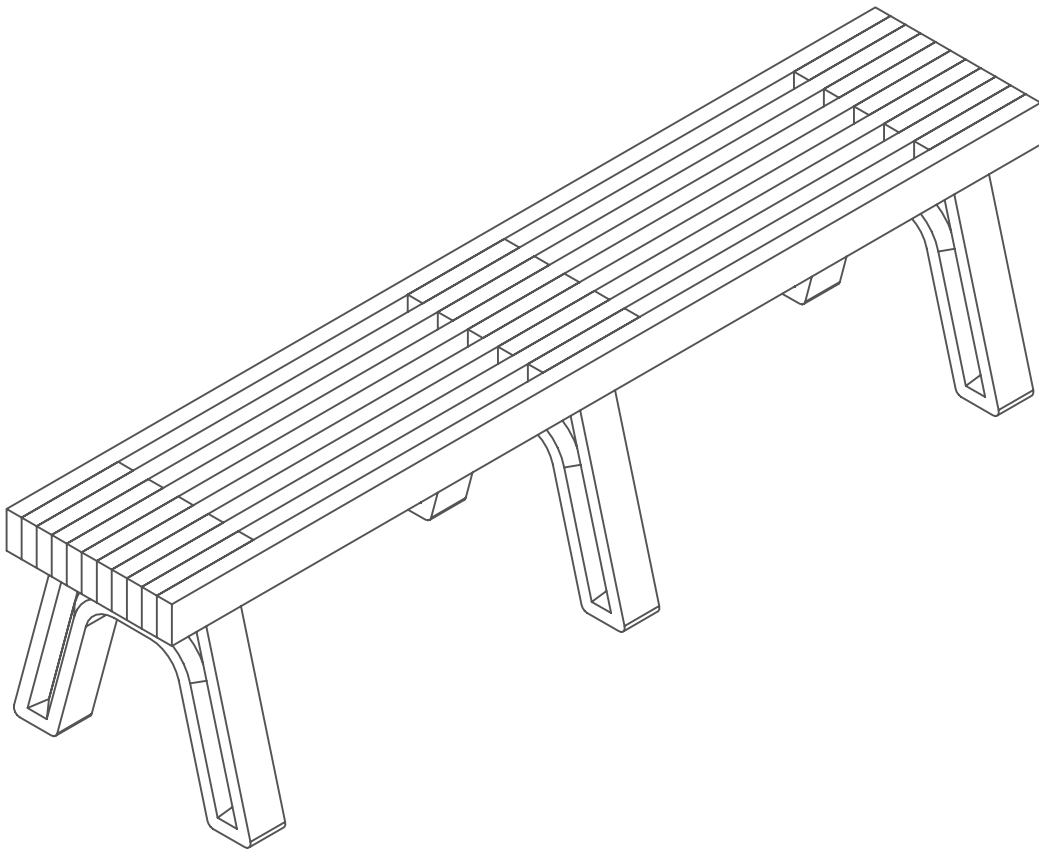

Before assembly, please make sure all components are included.






(1) - One Fastener Pack
FP-EB6F-CU-02

FP - Fastener Pack

A - Bench End

A - Bench End

A - Bench End

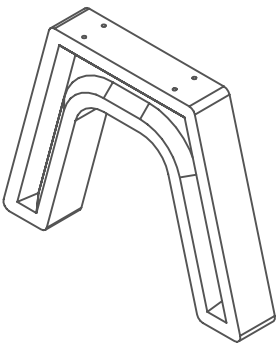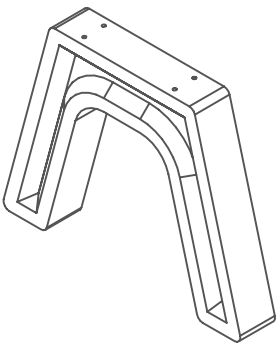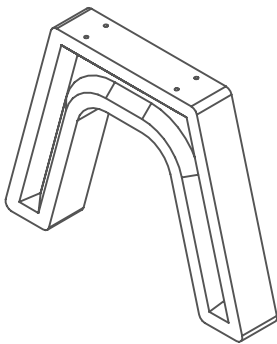

(3) - Three Bench Ends
PS-SFBE-E-01

.	.		.	.
.	.		.	.
.	.		.	.

(1) - One Bench Board
BSA-EB6F-A-02

B - Bench Board

Before assembly, please make sure all fasteners are included.

12 - #12 x 2 1/2" Flat Head Phillips Screw




Also needed for this assembly will be the following materials

1 - #3 Phillips Drive Bit

** In order to make assembly a little easier, dip threads fasteners in some liquid soap.

Step #1:


On a level surface place the Bench Board on the cardboard that your bench was shipped in with the pilot holes facing up.

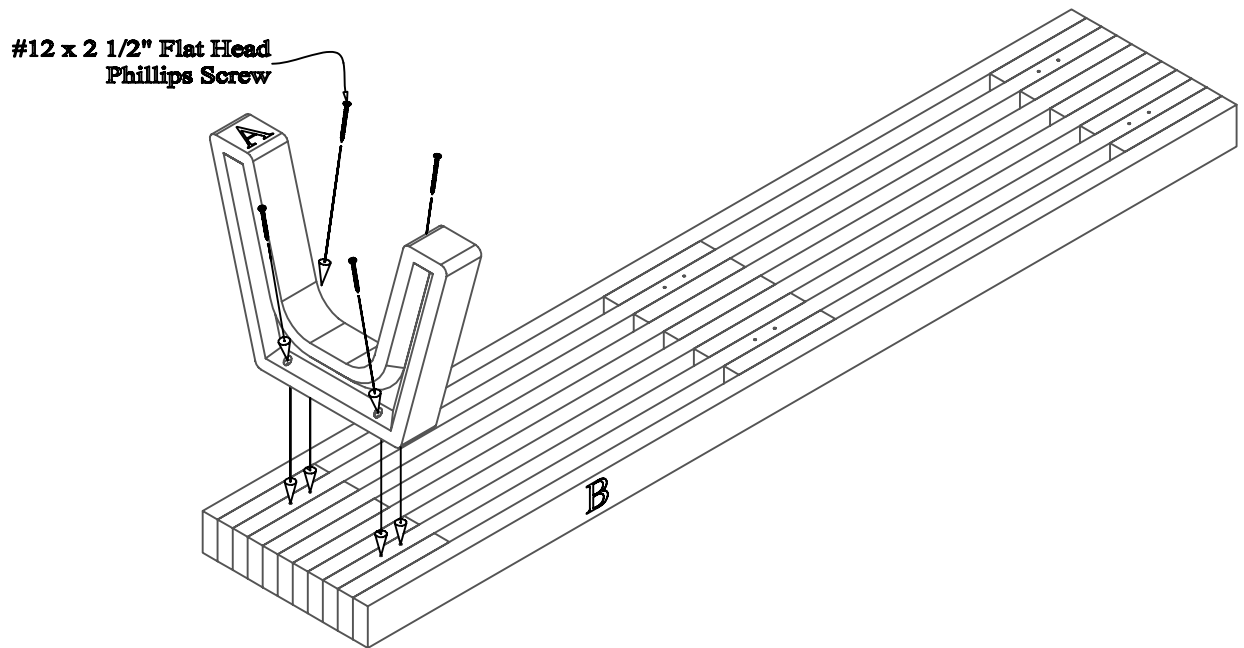

Step #2:

Position (1) One Bench End being sure to align the pre-drilled holes to the pilot holes in the bench seat. After the holes are properly aligned, fasten with (1) One #12 x 2 1/2" Flat Head Phillips Screw per hole to secure.

Note: Do not tighten screws completely. This will be done in a later step

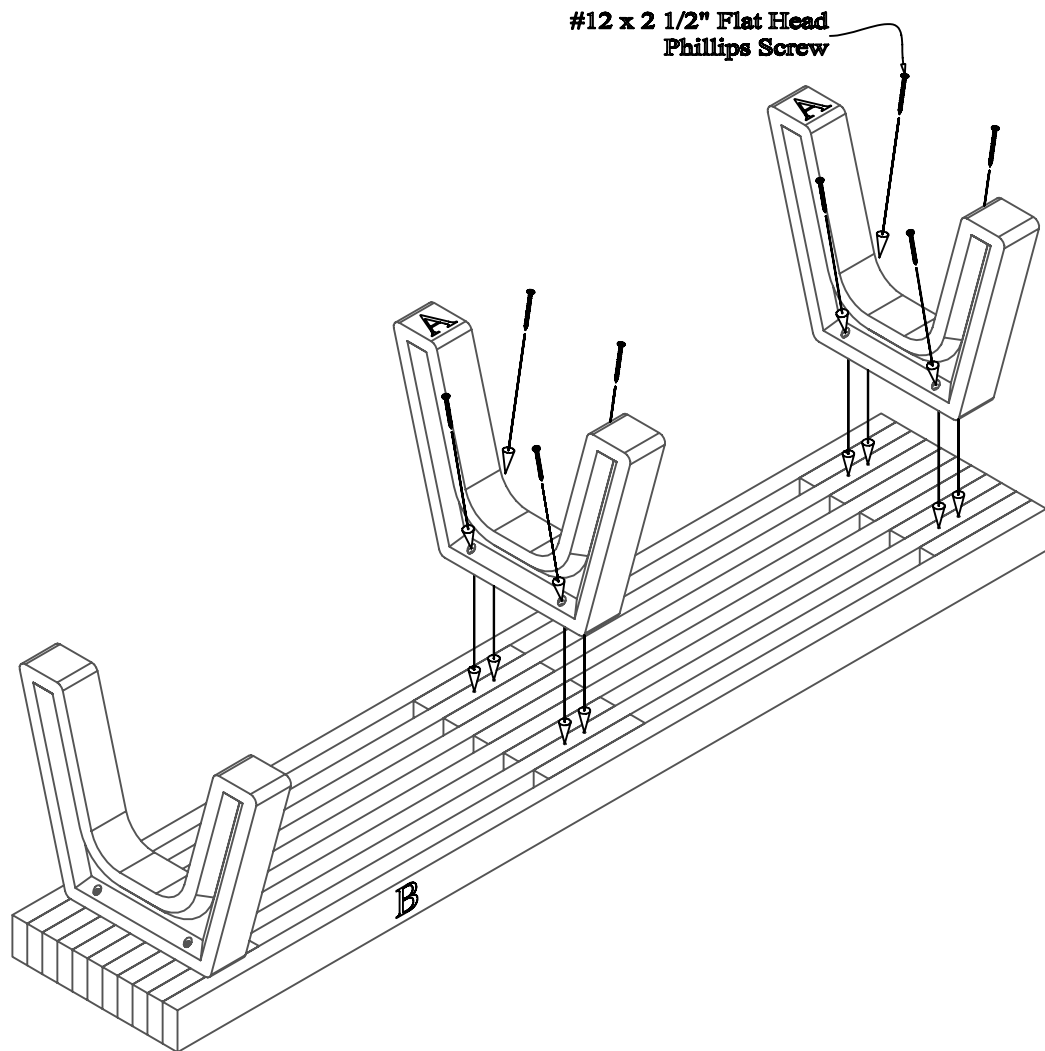

Step #3:

Align the remaining Bench Ends with the remaining pilot holes in the bench seat. After the holes are properly aligned, fasten with (1) One #12 x 2 1/2" Flat Head Phillips Screw per hole to secure.

Note: Be sure to tighten all screws completely after this step.

DEAR VALUED CUSTOMER,

THANK YOU FOR PURCHASING THIS
PRODUCT. THIS PRODUCT IS
MANUFACTURED USING RECYCLED
MATERIALS AND MAY HAVE SLIGHT
COLOR VARIATIONS, OCCASIONAL
SPECKS OF COLOR OR IRREGULAR
SURFACE PATTERNS. THESE ARE
NORMAL CONDITIONS OF RECYCLED
PLASTICS AND MAKE EACH PIECE OF
FURNITURE UNIQUE. THESE
CHARACTERISTICS DO NOT AFFECT
THE STRENGTH, QUALITY OR
PERFORMANCE OF THE PRODUCT.

THANK YOU AGAIN FOR PURCHASING
THIS PRODUCT AND HELPING OUR
ENVIRONMENT.