





# E-Series 46" Square ADA Picnic Table - Perforated

Model #: 622pt115


Top View:

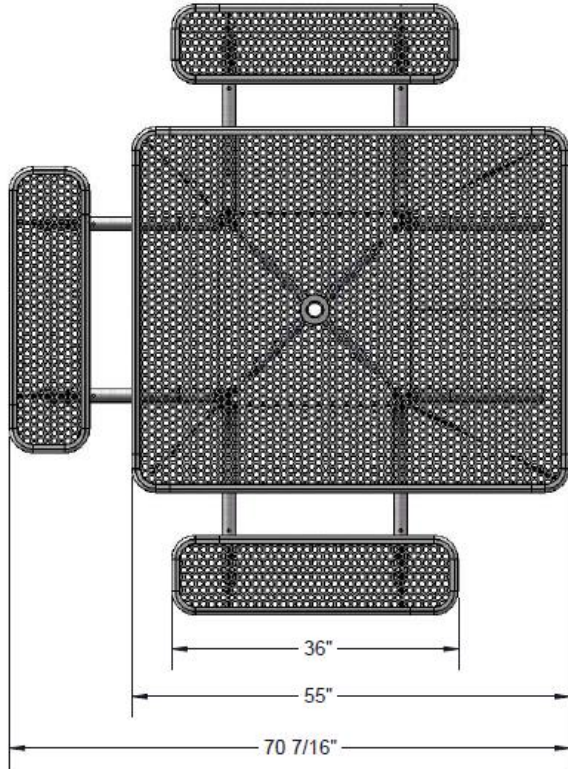

Front View:

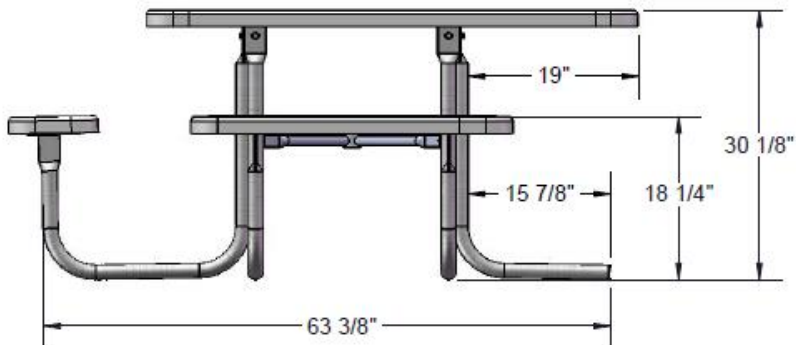

Side View:

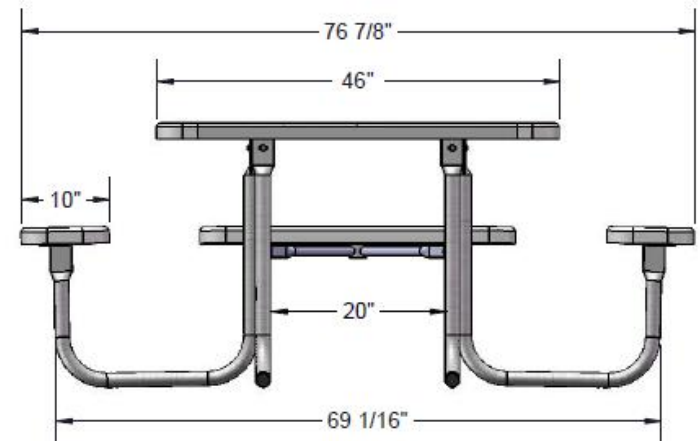



# **E-Series 46" Square ADA Picnic Table - Perforated**

*Model #: 622pt115*

## **Safety Warnings & Equipment Inspection:**


- ❖ Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- ❖ Follow installation instructions when erecting equipment.
- ❖ Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- ❖ Check for and repair damage caused by wear or vandalism, a major factor in injury causing situation.
- ❖ All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- ❖ All equipment should be free of rust and repainted whenever necessary to deter rusting.
- ❖ We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- ❖ Never add components not intended for use with this product
- ❖ Regular maintenance is necessary in this and all park and recreational equipment to ensure the safety of the user.
- ❖ Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- ❖ Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- ❖ Check to be sure all fittings are tight, and that bars and pipes do not move.
- ❖ Replace all worn S-hooks. S-hooks must be completely closed. Failure to close S-hooks can result in serious injury to the user. NEVER reuse S-hooks.
- ❖ Test for free movement of swing hanger and other moving attached parts.
- ❖ Check for worn chains and replace them
- ❖ A soft resilient surface should be placed under all swings extending at least twice the height of the top rail both front and back.




# E-Series 46" Square ADA Picnic Table - Perforated

*Model #: 622pt115*

## Hardware

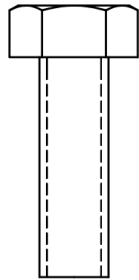

5/16" x 1"  
Machine Bolt

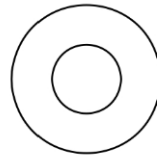

5/16" Washer







5/16" Kep Nut



## E-Series 46" Square ADA Picnic Table - Perforated

*Model #: 622pt115*

### Tools Required:

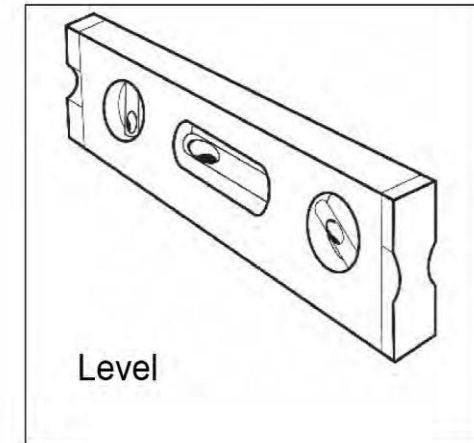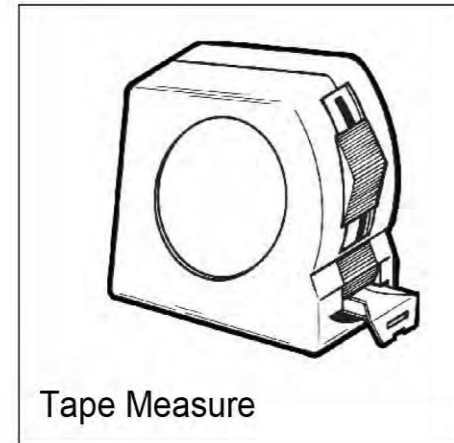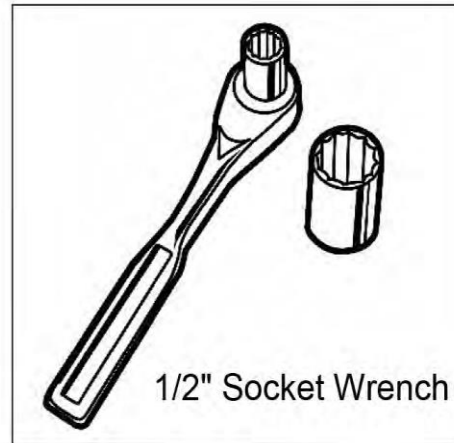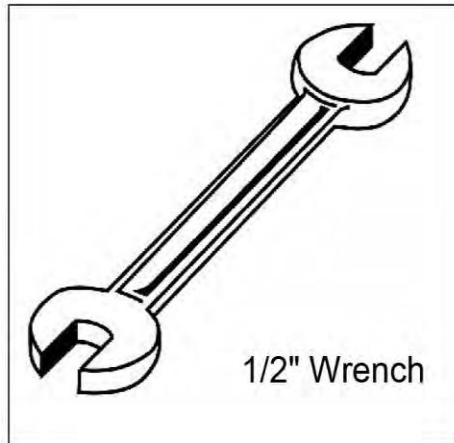



# E-Series 46" Square ADA Picnic Table - Perforated

Model #: 622pt115

## Product Highlights

|                |  |
|----------------|--|
| Top & Seats:   | 11 gauge die formed angle frame 1" x 1-7/8" with 3" radius corners.<br>Seat and top plates are fabricated from a 14-guage plate, precision punched with a 3/4" hole to create the punched hole pattern. The understructure/attachment plates are fabricated from 10-guage x 1-1/2" flat bar. Top is additionally supported to the outer frame with 10-guage x 1-1/2" flat bar. Top s additionally supported to the outer frame with 10-guage x 1-1/2" flat bar. Electrically MIG welded. |
| Coating:       | Oven fused functionalized polyethylene copolymer-based thermoplastic.<br>Fluidized bed coating application with superior mechanical performance, impact resistance and UV-stability.   |
| Frame:         | 1-5/8" O.D. x 14-gauge pre-galvanized structural steel tubing. Cross braces 1" O.D. x 16-guage pre-galvanized steel tubing. Brace attachment points 1-1/2" x 2" x 3/16" steel flat bar. Top mountings points are 7-gauge 2" x 2" die formed angle. Seat mounting points are 7-guage x 1-1/2" die tamped steel flat bar. Legs are bent over mandrel through the bend radius producing a wrinkle free bend. All electrically MIG welded.   |
| Frame Coating: | Electrostatic powder coated application oven cured.  |
| Hardware:      | All stainless-steel hardware fasteners.  |
| Dimensions:    | Top is 46" x 55" x 30" high. Seats are 10" wide x 36" long x 18-1/4" high. Outside to outside dimensions of 3 seat accessible table is 76-3/4" x 70".  |






# E-Series 46" Square ADA Picnic Table - Perforated

Model #: 622pt115

## Components

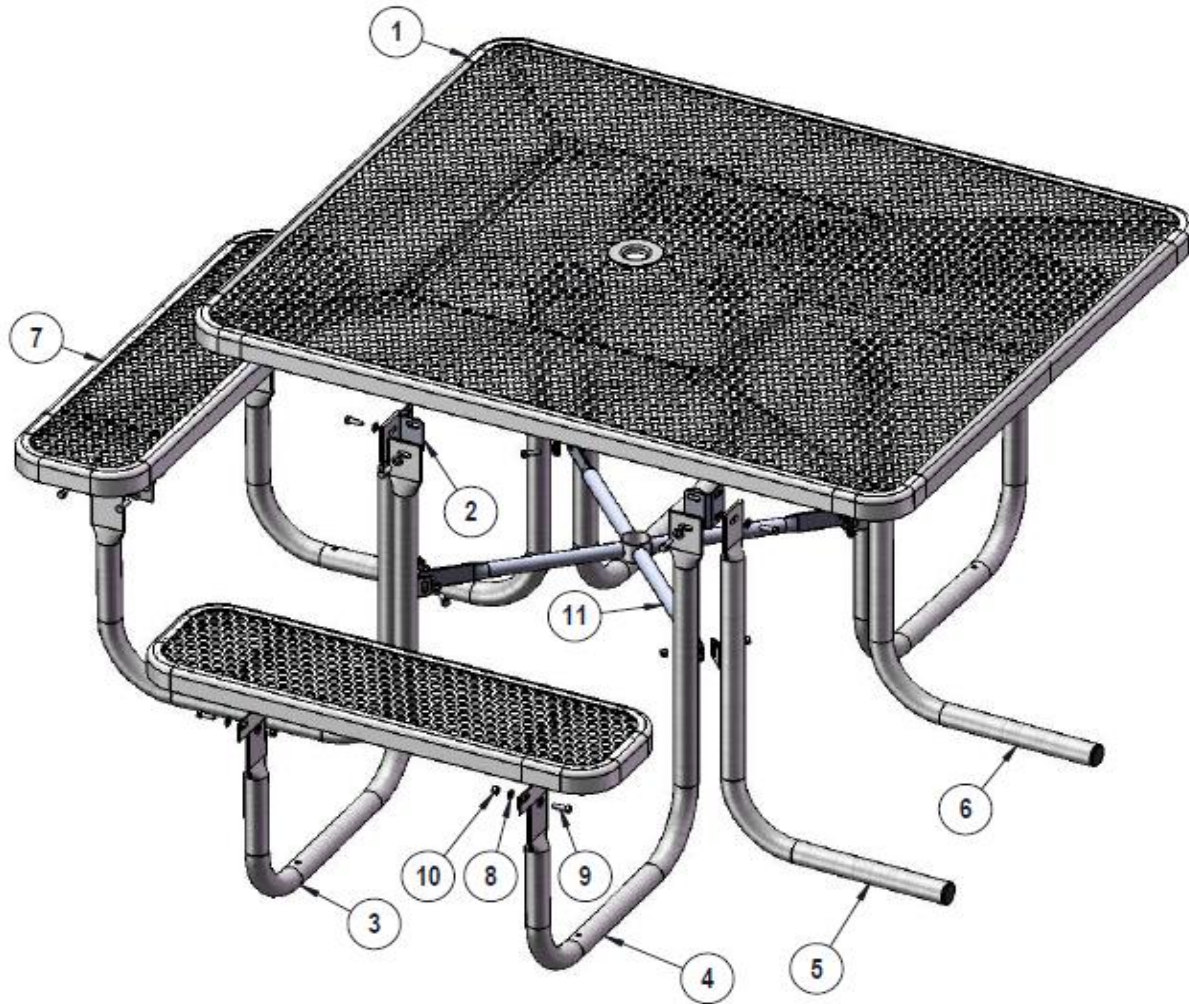


| Item No. | Part No.     | Description                       | QTY |
|----------|--------------|-----------------------------------|-----|
| 1        | T-EP46H-T    | 46" Sq. Handicap Top (Perforated) | 1   |
| 2        | P-01-04-0121 | Extension Tab                     | 4   |
| 3        | P-V358-L     | Vinyl Leg L                       | 3   |
| 4        | P-V358-R     | Vinyl Leg R                       | 3   |
| 5        | P-V358H-L    | Vinyl Leg LH                      | 1   |
| 6        | P-V358H-R    | Vinyl Leg RH                      | 1   |
| 7        | T-EP36-S     | 3' x 10" Perforated Seat          | 3   |
| 8        | 33-02-0007   | 5/16" Flat Washer (SS)            | 64  |
| 9        | 33-05-0029   | 5/16" x 1" Machine Bolt (SS)      | 32  |
| 10       | 33-03-0012   | 5/16" Kep Nut (SS)                | 32  |
| 11       | P-01-04-0122 | Cross brace w/ umbrella tube      | 1   |



# E-Series 46" Square ADA Picnic Table - Perforated

Model #: 622pt115

## Instructions

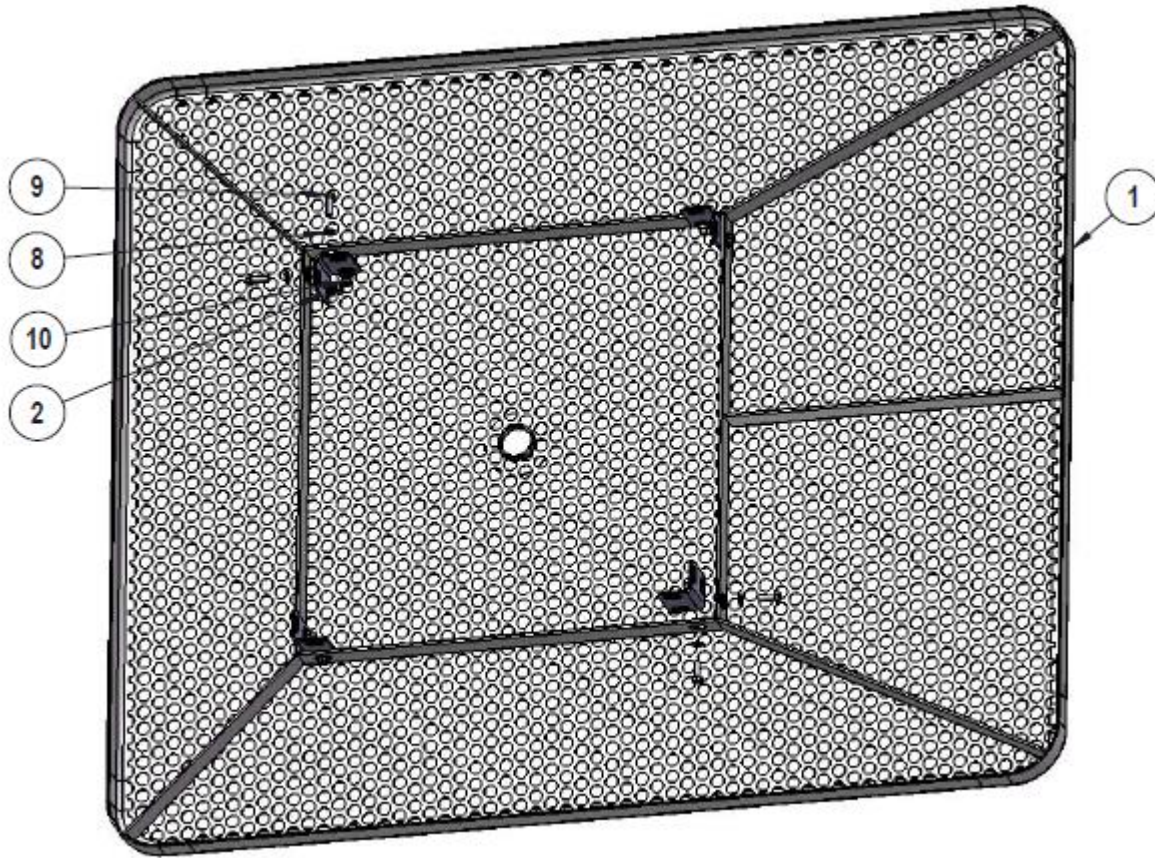

### **Step 1:**


- ❖ Attach the extensions tabs to the 46" square handicap top using specified hardware.



# E-Series 46" Square ADA Picnic Table - Perforated

Model #: 622pt115

## Instructions

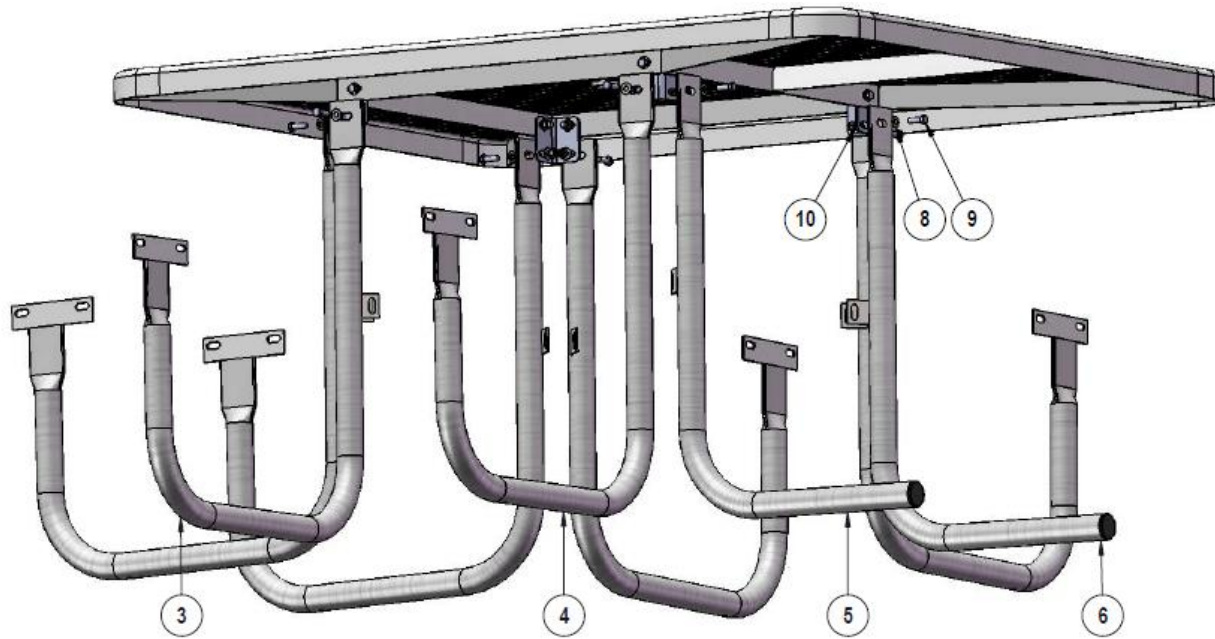

### **Step 2:**

- ❖ Attach the legs to the outside of the extension tabs using specified hardware.






# E-Series 46" Square ADA Picnic Table - Perforated

Model #: 622pt115

## Instructions

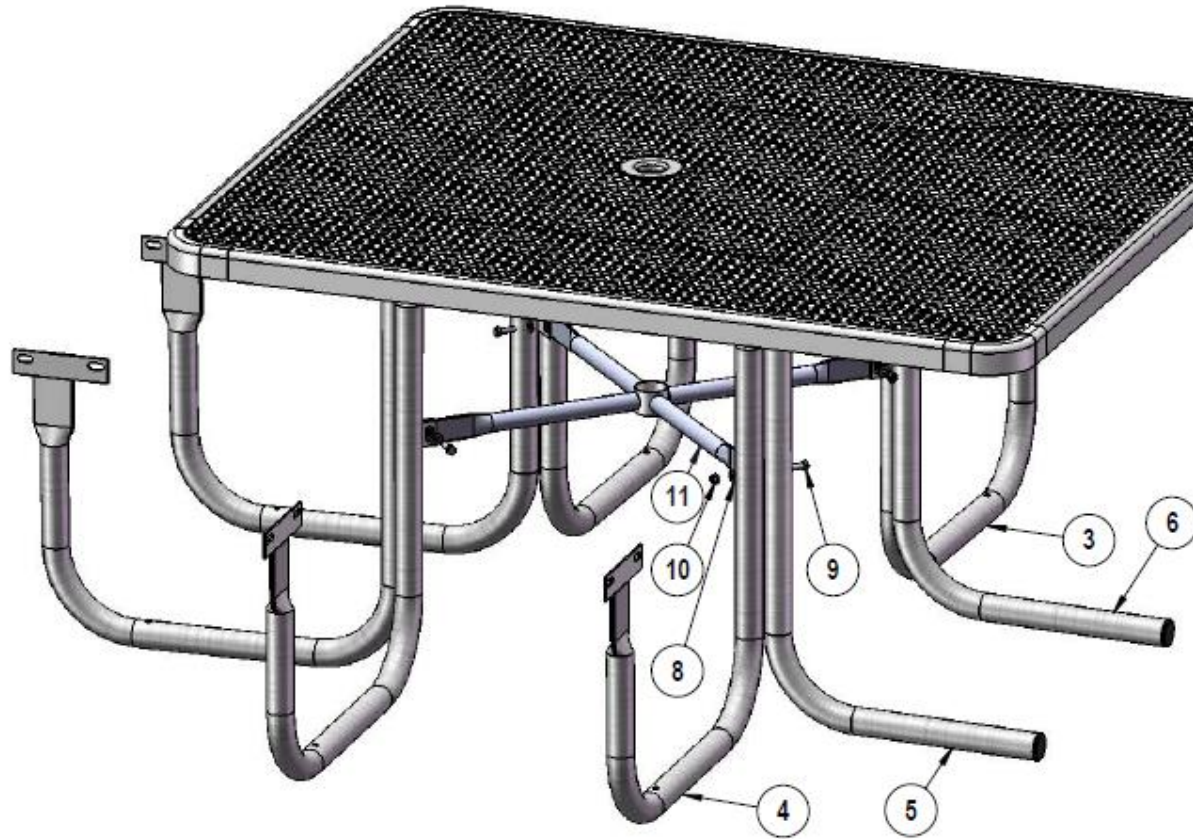

### **Step 3:**

- ❖ Attach the cross brace between the table legs shown using specified hardware.




# E-Series 46" Square ADA Picnic Table - Perforated

Model #: 622pt115

## Instructions

### **Step 4:**

- ❖ Attach the 3' seats to the legs using specified hardware.

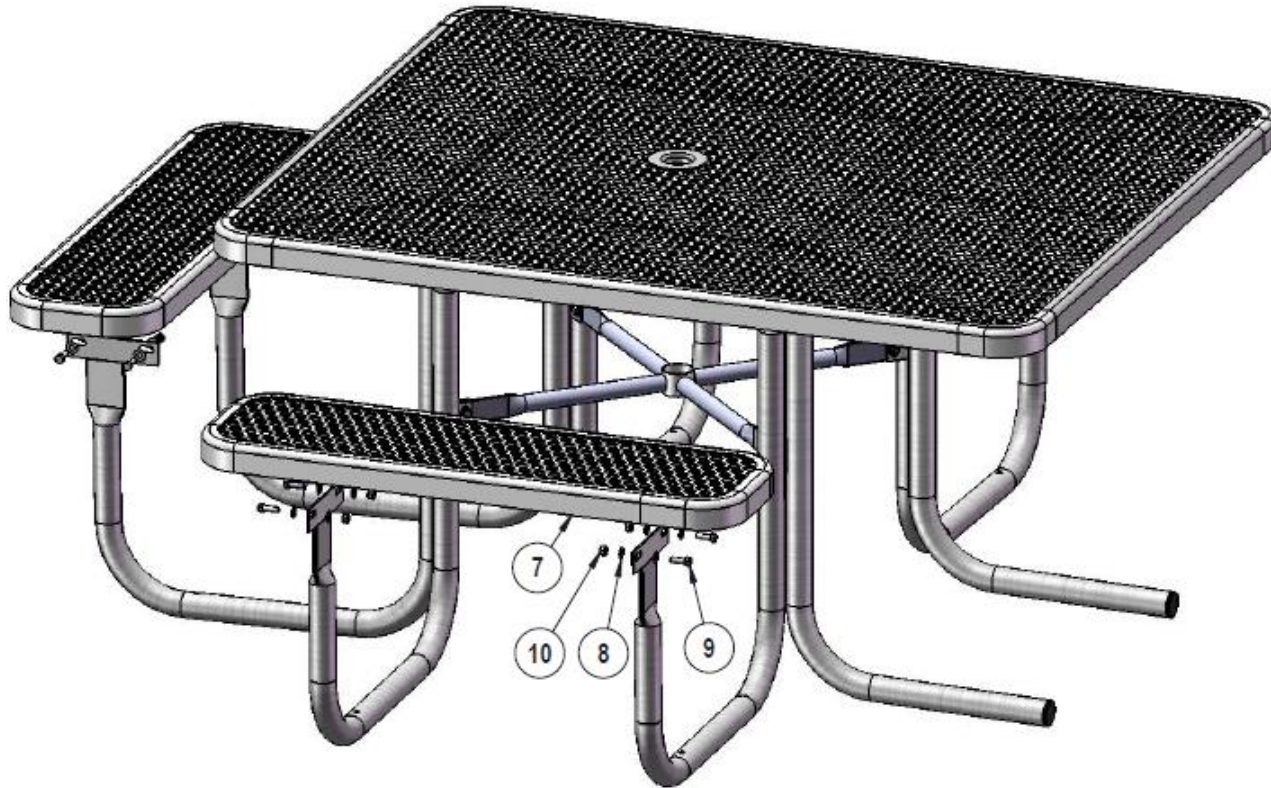





# E-Series 46" Square ADA Picnic Table - Expanded

Model #: 622pt115


Top View:

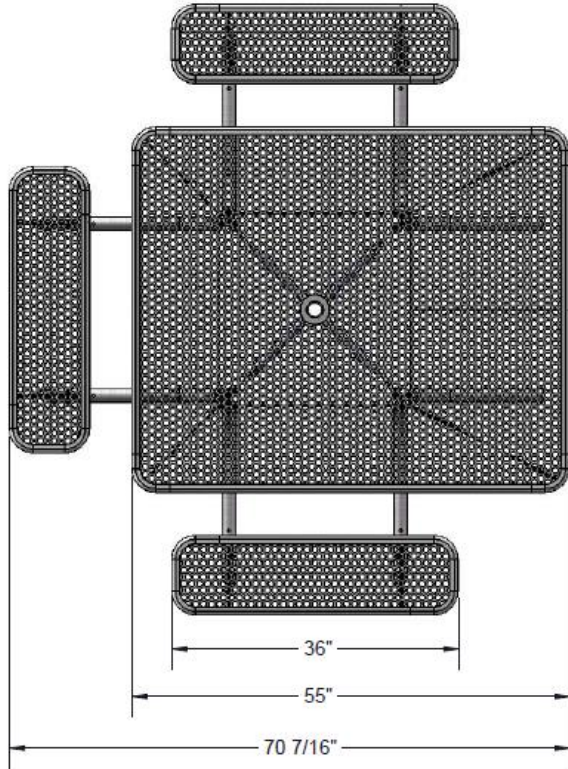

Front View:

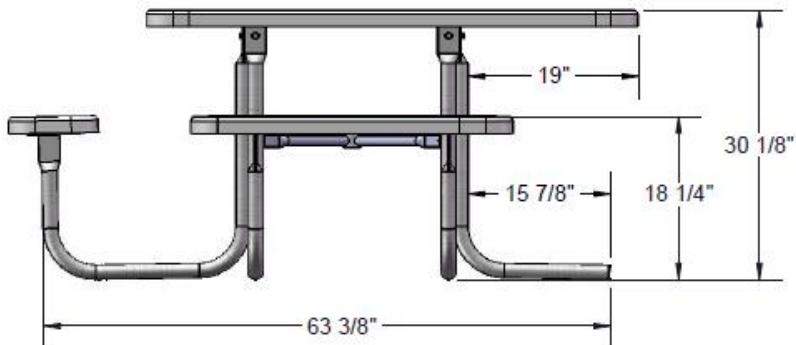

Side View:

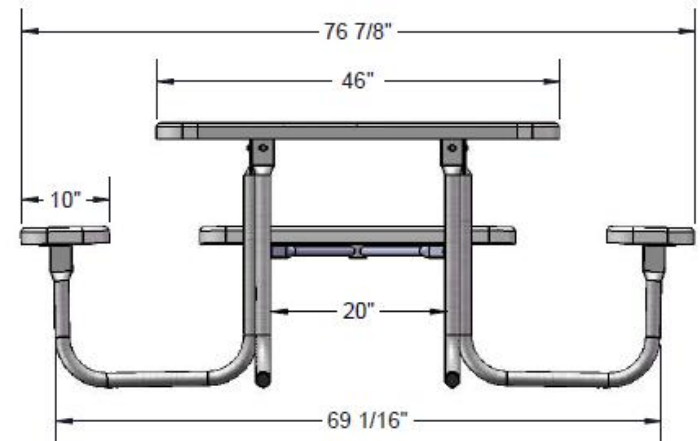





# **E-Series 46" Square ADA Picnic Table - Expanded**

*Model #: 622pt115*

## **Safety Warnings & Equipment Inspection:**

- ❖ Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- ❖ Follow installation instructions when erecting equipment.
- ❖ Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- ❖ Check for and repair damage caused by wear or vandalism, a major factor in injury causing situation.
- ❖ All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- ❖ All equipment should be free of rust and repainted whenever necessary to deter rusting.
- ❖ We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- ❖ Never add components not intended for use with this product
- ❖ Regular maintenance is necessary in this and all park and recreational equipment to ensure the safety of the user.
- ❖ Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- ❖ Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- ❖ Check to be sure all fittings are tight, and that bars and pipes do not move.
- ❖ Replace all worn S-hooks. S-hooks must be completely closed. Failure to close S-hooks can result in serious injury to the user. NEVER reuse S-hooks.
- ❖ Test for free movement of swing hanger and other moving attached parts.
- ❖ Check for worn chains and replace them
- ❖ A soft resilient surface should be placed under all swings extending at least twice the height of the top rail both front and back.







# E-Series 46" Square ADA Picnic Table - Expanded

*Model #: 622pt115*


## Hardware

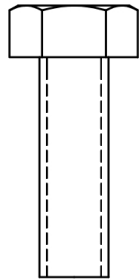

5/16" x 1"  
Machine Bolt

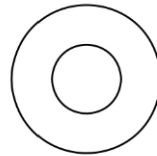

5/16" Washer







5/16" Kep Nut



## E-Series 46" Square ADA Picnic Table - Expanded

*Model #: 622pt115*

### Tools Required:

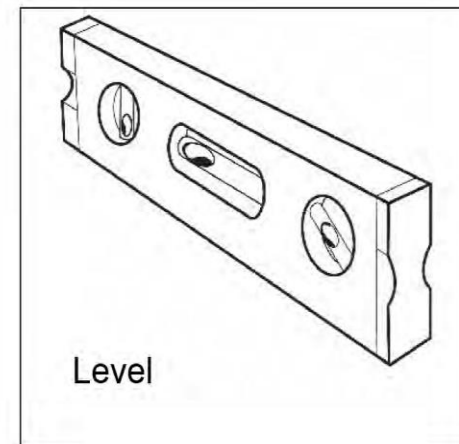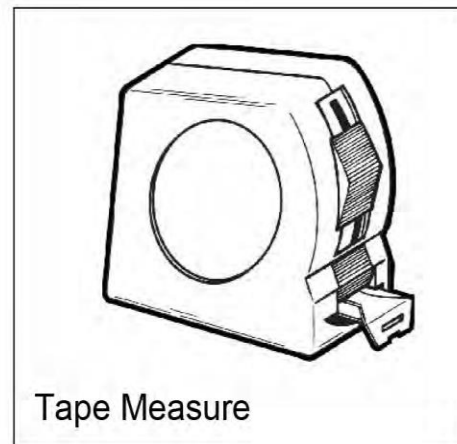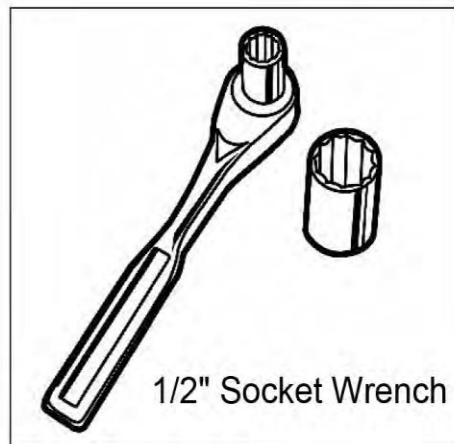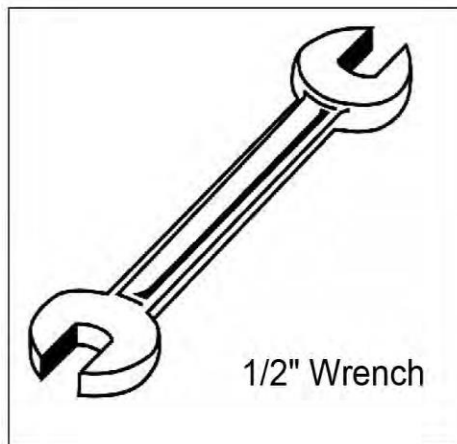



# E-Series 46" Square ADA Picnic Table - Expanded

Model #: 622pt115

## Product Highlights


|                |  |
|----------------|--|
| Top & Seats:   | 11 gauge die formed angle frame 1" x 1-7/8" with 3" radius corners.<br>The understructure/attachment plates are fabricated from 10-guage x 1-1/2" flat bar. Top is additionally supported to the outer frame with 10-guage x 1-1/2" flat bar. Top s additionally supported to the outer frame with 10-guage x 1-1/2" flat bar. Electrically MIG welded.  |
| Coating:       | Oven fused functionalized polyethylene copolymer-based thermoplastic.<br>Fluidized bed coating application with superior mechanical performance, impact resistance and UV-stability.   |
| Frame:         | 1-5/8" O.D. x 14-gauge pre-galvanized structural steel tubing. Cross braces 1" O.D. x 16-guage pre-galvanized steel tubing. Brace attachment points 1-1/2" x 2" x 3/16" steel flat bar. Top mountings points are 7-gauge 2" x 2" die formed angle. Seat mounting points are 7-guage x 1-1/2" die tamped steel flat bar. Legs are bent over mandrel through the bend radius producing a wrinkle free bend. All electrically MIG welded. |
| Frame Coating: | Electrostatic powder coated application oven cured.  |
| Hardware:      | All stainless-steel hardware fasteners.  |
| Dimensions:    | Top is 46" x 55" x 30" high. Seats are 10" wide x 36" long x 18-1/4" high. Outside to outside dimensions of 3 seat accessible table is 76-3/4" x 70".  |



# E-Series 46" Square ADA Picnic Table - Expanded

Model #: 622pt115

## Components

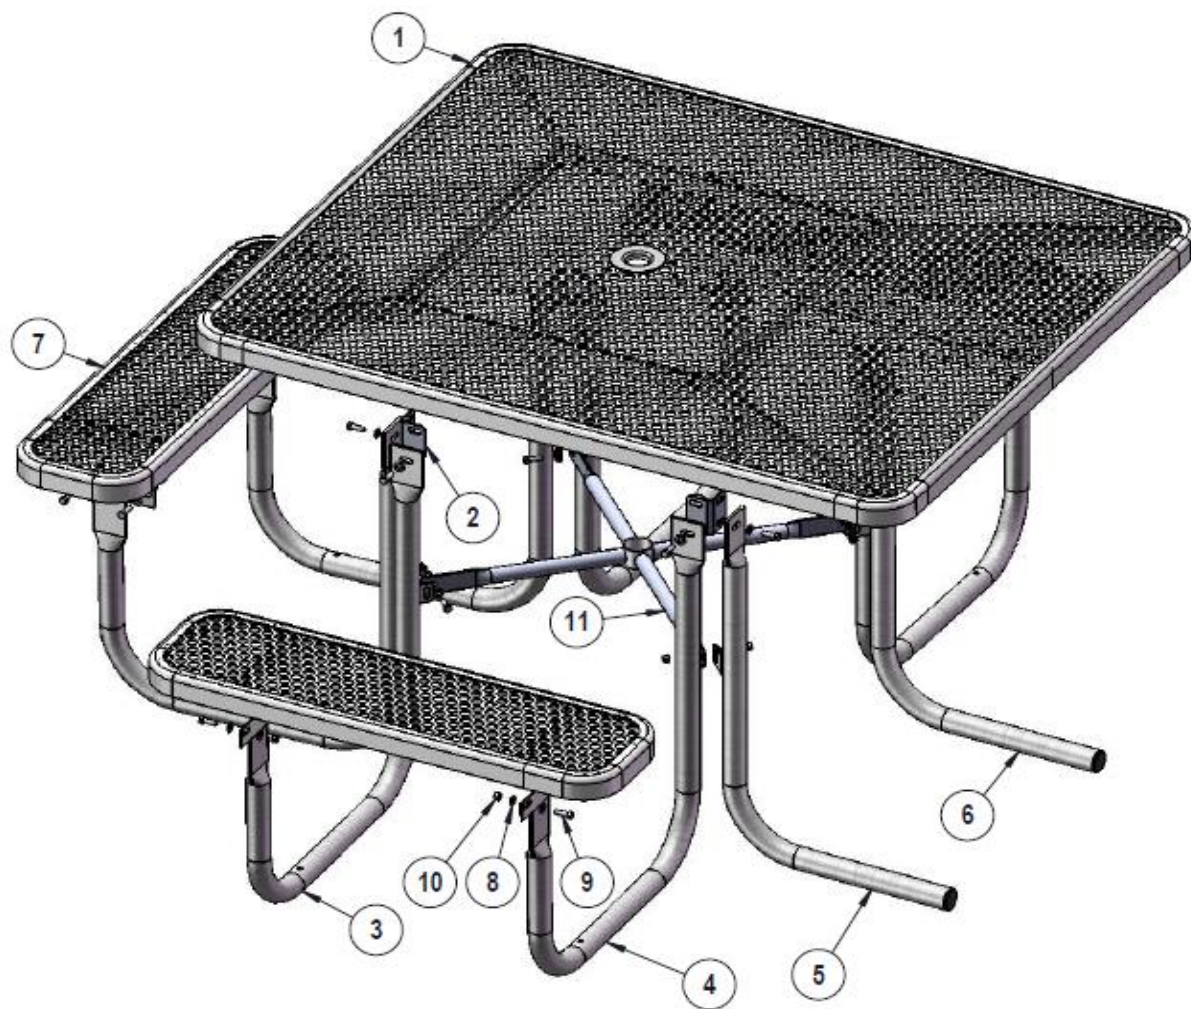

| Item No. | Part No.     | Description                       | QTY |
|----------|--------------|-----------------------------------|-----|
| 1        | T-EP46H-T    | 46" Sq. Handicap Top (Perforated) | 1   |
| 2        | P-01-04-0121 | Extension Tab                     | 4   |
| 3        | P-V358-L     | Vinyl Leg L                       | 3   |
| 4        | P-V358-R     | Vinyl Leg R                       | 3   |
| 5        | P-V358H-L    | Vinyl Leg LH                      | 1   |
| 6        | P-V358H-R    | Vinyl Leg RH                      | 1   |
| 7        | T-EP36-S     | 3' x 10" Perforated Seat          | 3   |
| 8        | 33-02-0007   | 5/16" Flat Washer (SS)            | 64  |
| 9        | 33-05-0029   | 5/16" x 1" Machine Bolt (SS)      | 32  |
| 10       | 33-03-0012   | 5/16" Kep Nut (SS)                | 32  |
| 11       | P-01-04-0122 | Cross brace w/ umbrella tube      | 1   |






# E-Series 46" Square ADA Picnic Table - Expanded

Model #: 622pt115

## Instructions

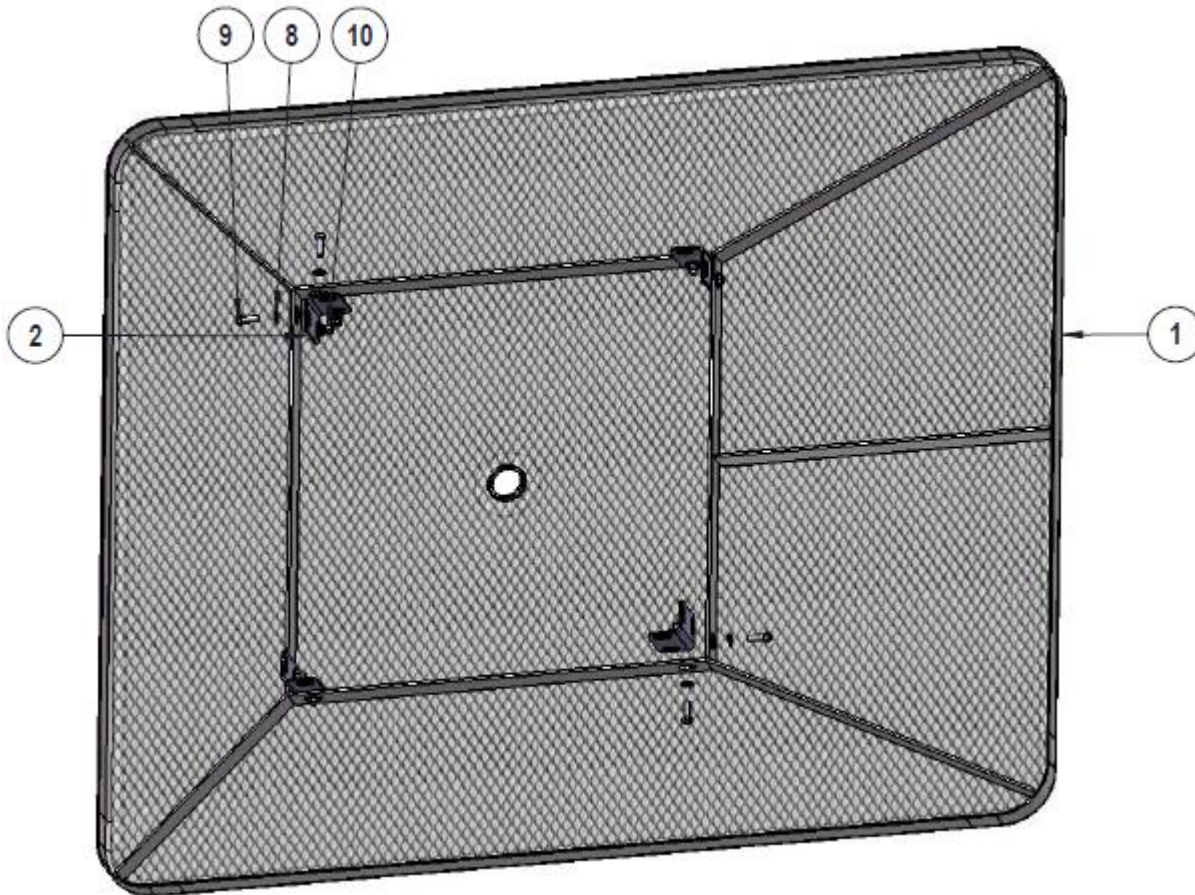

### **Step 1:**

- ❖ Attach the extensions tabs to the 46" square handicap top using specified hardware.




# E-Series 46" Square ADA Picnic Table - Expanded

Model #: 622pt115

## Instructions

### Step 2:

- ❖ Attach the legs to the outside of the extension tabs using specified hardware.

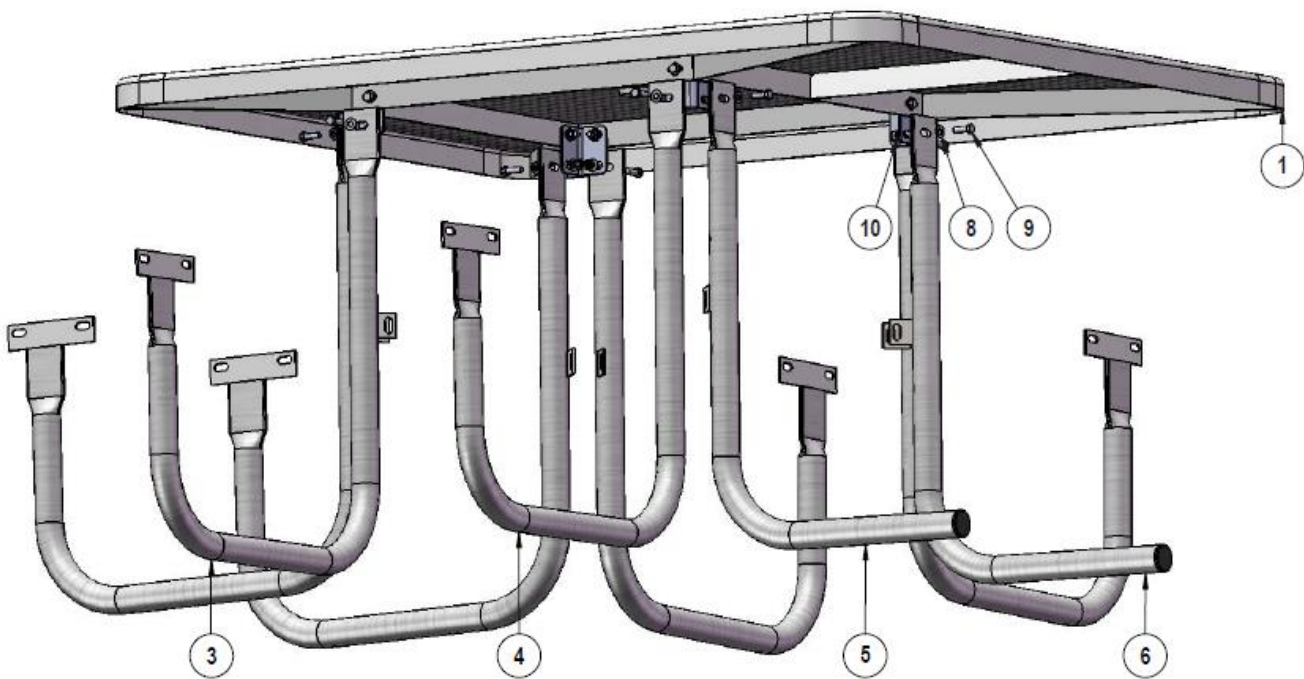




# E-Series 46" Square ADA Picnic Table - Expanded

Model #: 622pt115

## Instructions

### Step 3:

- ❖ Attach the cross brace between the table legs shown using specified hardware.

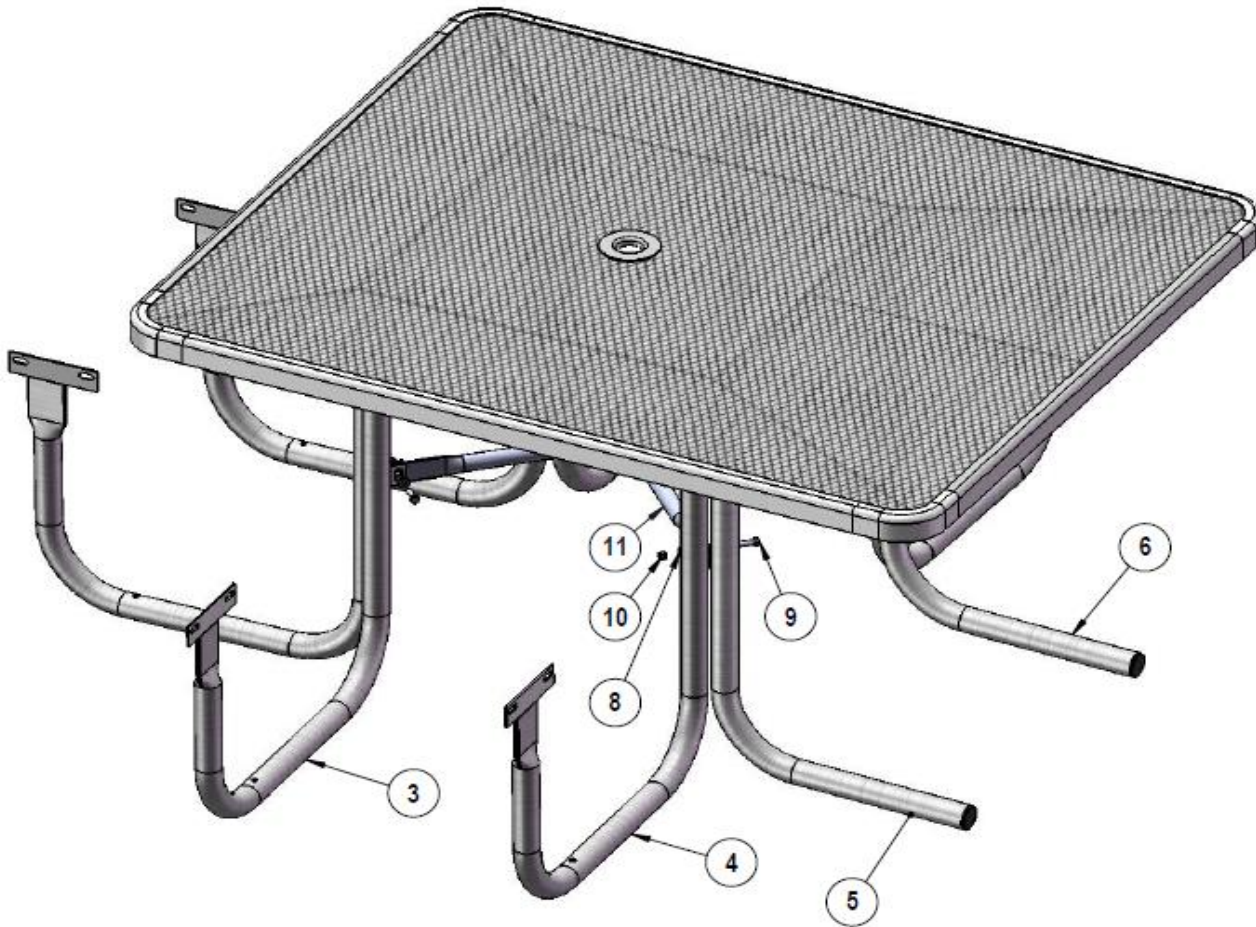





# E-Series 46" Square ADA Picnic Table - Expanded

Model #: 622pt115

## Instructions

### **Step 4:**

- ❖ Attach the 3' seats to the legs using specified hardware.

